



Custom Made Carbon for Exotics

Ferrari LED Shift Light & Cover Replacement Install Instructions

Installation Statistics

Ease of Install	Intermediate
Time to Install	20 minutes

Tools Required




<p>Blue Painter's Tape MACarbon Chisel Tip Install Tool Philips Head Screw Driver</p>	
---	--

Installation Steps

Step	Instructions	Photo
1.	<p>Use the chisel tip install tool to pop out the plastic strip.</p> <p>If the strip has been glued in or is not coming out easily, place some blue tape over the CF to protect it as you pry a little harder.</p> <p>NOTE: Installation is shown with the steering wheel out of the car. These photos were taken while we were restoring/customizing a customer's wheel. It is not necessary to remove the wheel from the car.</p>	



Custom Made Carbon for Exotics

Step	Instructions	Photo
2.	Disengage the strip completely.	
3.	Use your Philips head screw driver to remove the two retaining screws. Replacing the old unit is not required if all of your LEDs are working. However, if your clear cover has been glued or is generally loose, we recommend replacing the LED unit 'while you are there'.	
4.	Pull out the old LED unit and disconnect it.	


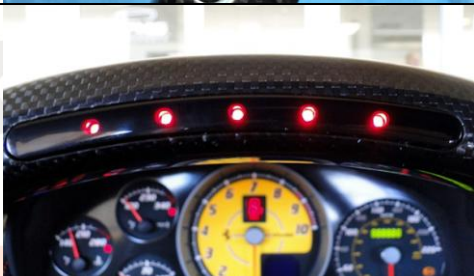


Custom Made Carbon for Exotics

Step	Instructions	Photo
5.	Layout the new LED unit. Insert the blocking strip into the clear plastic.	
6.	Connect the new LED unit.	
7.	Screw the LED unit into the wheel.	



Custom Made Carbon for Exotics

Step	Instructions	Photo
8.	Insert the new plastic cover onto the wheel and press into place.	
9.	Enjoy your work!	

M-ACA